
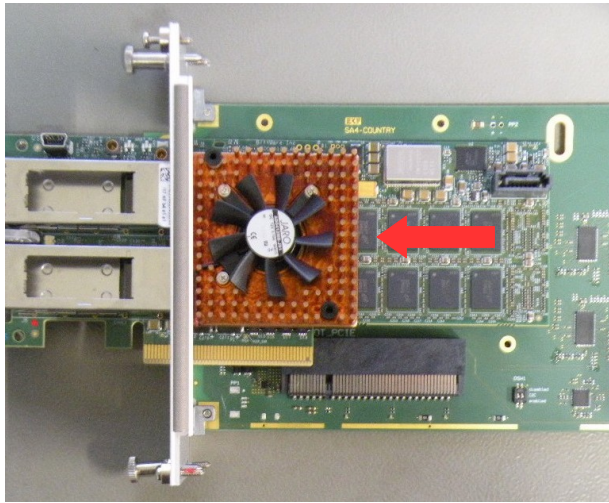
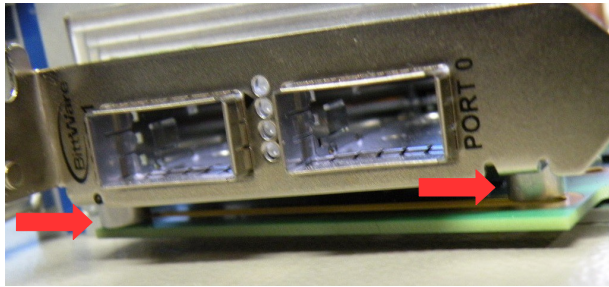
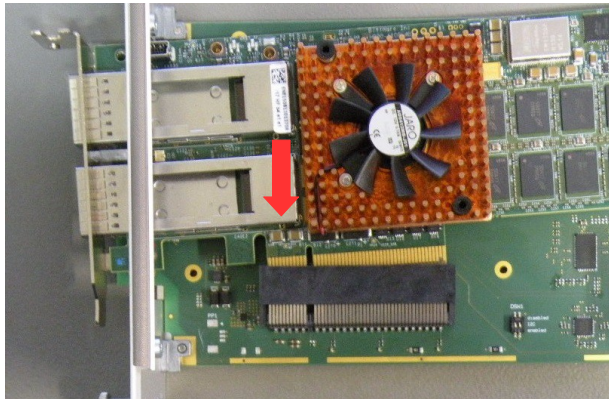
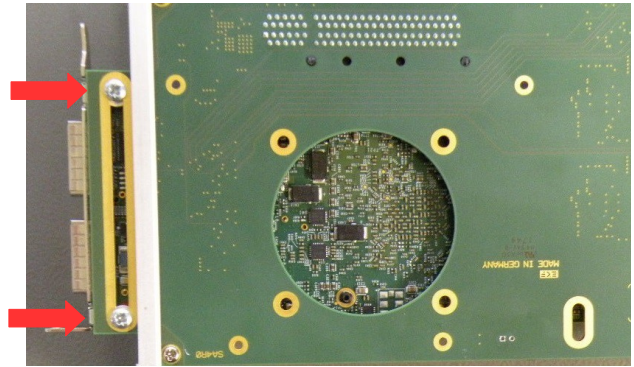


QM-Form (5368 / 2018-05-29 vl): qm\_allg\_txt\_en.odt


<p>1. The incidentals and their numbers are shown on the right.</p>	 <p>1 2 3 4 5 6</p> <p>(similar picture)</p>
<p>2. Remove first the front bracket of your PCI Express Card. Push the express card through the front of the SA4 (from right to left).</p>	 <p>(similar picture)</p>
<p>3. Lay the two jackets (5) between the the bracket of the express card on the SA4.</p>	 <p>(similar picture)</p>
<p>4. Plug in the Express Card in the Express Card Slot of the SA4</p>	 <p>(similar picture)</p>

5. Tighten the two screws (3) in the Express Card bracket.




(similar picture)

6. Lay the washer (1) and the snap ring (2) on the screw and tighten the screw nut (4).

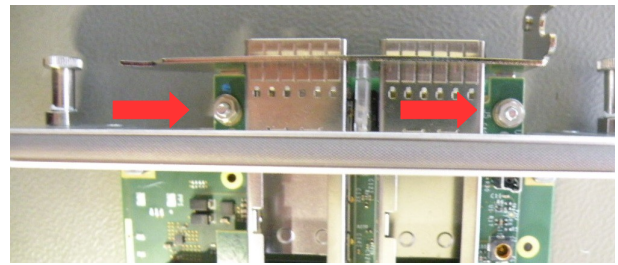


(similar picture)

7. Put the front hood on the front panel.

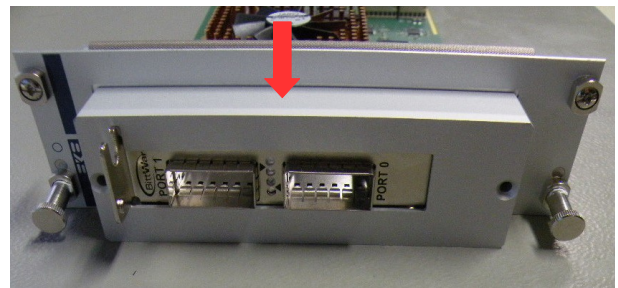

(similar picture)

8. Tighten the two screws (6) to fix the front hood.

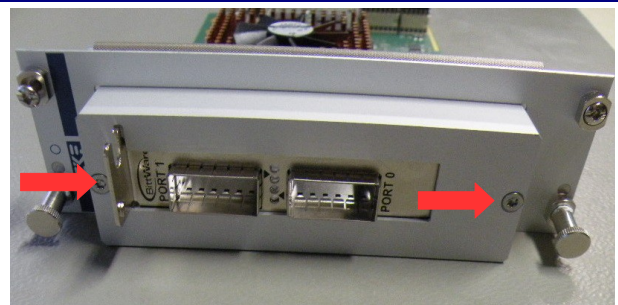

(similar picture)